



FY-41AP upgrade port connection instructions

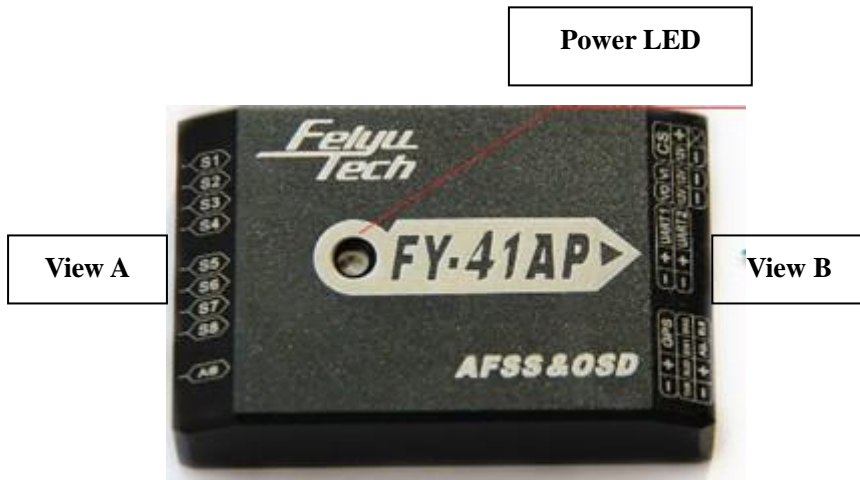

Interface diagram :

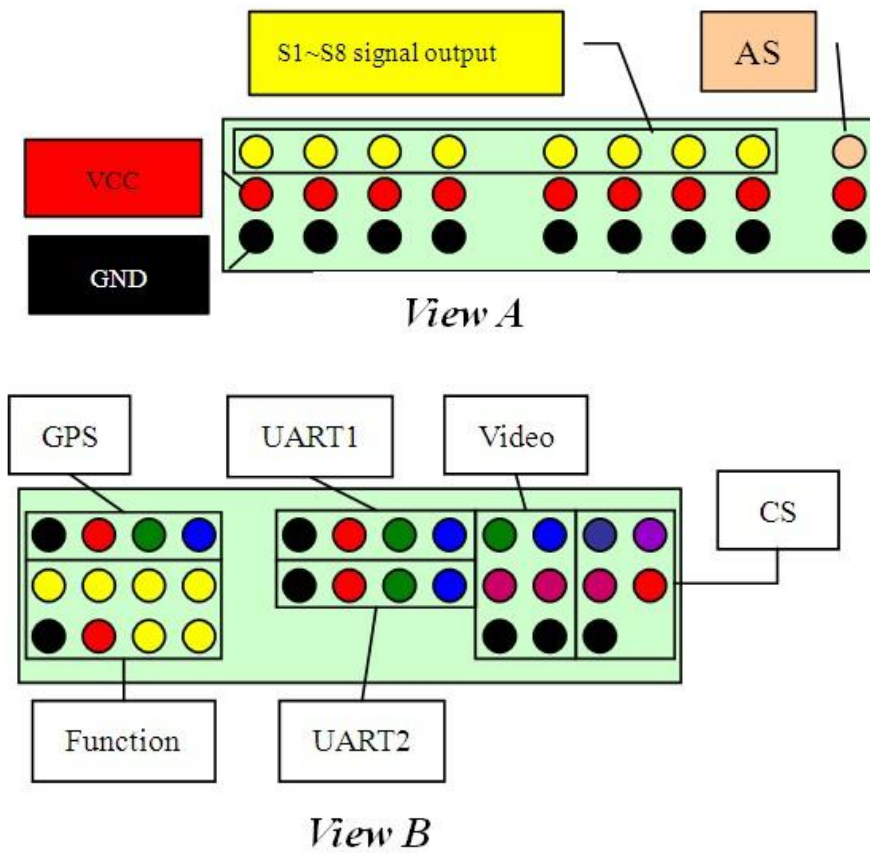

View B:

The following form should correspond to the interface diagram of port location one to one.

• **UART1 module interface:**

GND	VCC	UART1-TXD	UART1-RXD
-----	-----	-----------	-----------

This interface connects to the data radio, PC computer serial port to do the firmware upgrade for FY-41AP control module.

- UART1-TXD: TX port.
- UART1-RXD: TX port.
- VCC: +5V output port.
- GND: GND output port.

• **UART2 module interface:**

GND	VCC	UART2-TXD	UART2-RXD
-----	-----	-----------	-----------

This interface connects to the PC computer serial port to do the firmware upgrade for FY-41AP OSD module.

- VCC: +5V output port.
- GND: GND output port.
- UART2-TXD: TX port.
- UART2-RXD: TX port.

----- END -----

Note: We reserve the right to change this manual at any time! And the newest edition will be shown on our website www.feiyudz.cn.